

PART #	DESCRIPTION	QTY.	INSTALLATION INSTRUCTIONS Only water batteries after charging. Do not leave unattended. 1. Remove existing battery caps. 2. Ensure the electrolyte level is covering the plates in each cell. If not, add just enough water to cover the plates. 3. Following the diagram above, insert the valves into the vent holes. 4. Push straight down on each valve until it snaps into the cell. 5. Make sure all tubing remains unobstructed. 336-714-0448 www.batterywatering.com
Various	Low Profile Valve	15	
08TUB6BLK	6mm Tubing	8'	
09BDCAP	Dust Cap	1	
08CAP6	End Cap	3	
08T666N	T Piece 6-6-6	2	
09MBLU1	1/4" Male Connector	1	
-	-	-	
_	-	-	