

RT #	DESCRIPTION	QTY.	
ous	Low Profile Valve	24	
B6BLK	6mm Tubing	12'	1. F 2. E 11 3. F
CAP	Dust Cap	1	
AP6	End Cap	6	
66N	T Piece 6-6-6	5	4. F 5. N
BLU1	1/4" Male Connector	1	- 5. r
•	-	-	
-	-	-	
	ous 36BLK DCAP AP6 566N	ous Low Profile Valve 36BLK 6mm Tubing OCAP Dust Cap AP6 End Cap 366N T Piece 6-6-6	ousLow Profile Valve2436BLK6mm Tubing12'0CAPDust Cap1AP6End Cap6566NT Piece 6-6-65

## INSTALLATION INSTRUCTIONS Only water batteries after charging. Do not leave unattended.

Remove existing battery caps.

2. Ensure the electrolyte level is covering the plates in each cell. If not, add just enough water to cover the plates.

3. Following the diagram above, insert the valves into the vent holes.

- 4. Push straight down on each valve until it snaps into the cell.
- 5. Make sure all tubing remains unobstructed.

## 336-714-0448 www.batterywatering.com