




Customer will make final connections at installation

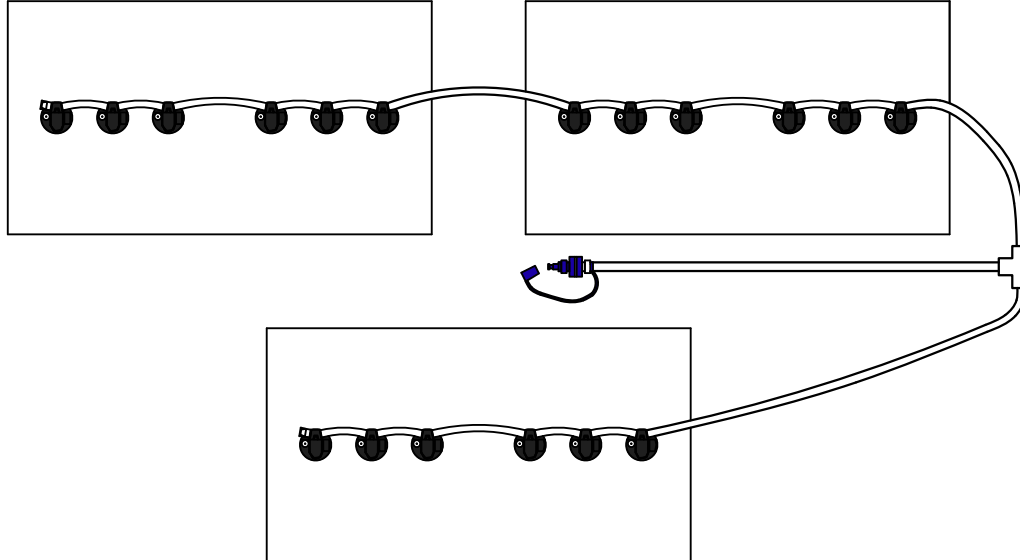

1. Place 4 end caps and 2 T pieces into a 3x3 red ziplock bag
2. Place 6 ft of tubing into a 8x10 ziplock bag and add the red bag to this bag
- 3 Fully assemble the fill tube and place loose in the bag



4. Assemble 6 strings of 3 valves

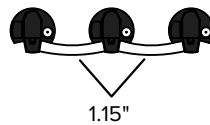

This is a guide to installing a partially assembled kit. The diagram(s) above show the most common configurations. Make sure tubing clears battery cables and all obstructions.
Only water batteries after charging

12 @ 1.15"
1 @ 18.0"
1 @ 6.0ft

PART #	DESCRIPTION	QTY.	SAFETY INFORMATION
VC-TB4	String of 3 Valves	6	<ul style="list-style-type: none"> • Prior to servicing any vehicle, please turn the key switch to the OFF position. • Do not service any vehicle while the charger cable is plugged into the vehicle or while it is moving. • Do not use any metal tools or have anything metal on your body while working over the batteries. • Wear proper safety protection such as safety glasses, face shield, and rubber gloves when installing or working with batteries. • If acid comes into contact with your skin, or eyes, flush with water and call a physician immediately.
08TUB6	Tubing	6'	
08T666N	T Piece	3	
09BDCAP	Dust Cap	1	
09MBLU1	Male Connector	1	
08CAP6	End Cap	4	
L#7786	3"x4" Battery Filler Instr.	1	
			336-714-0448 www.batterywatering.com