




Note: Must take off battery tie downs before installing

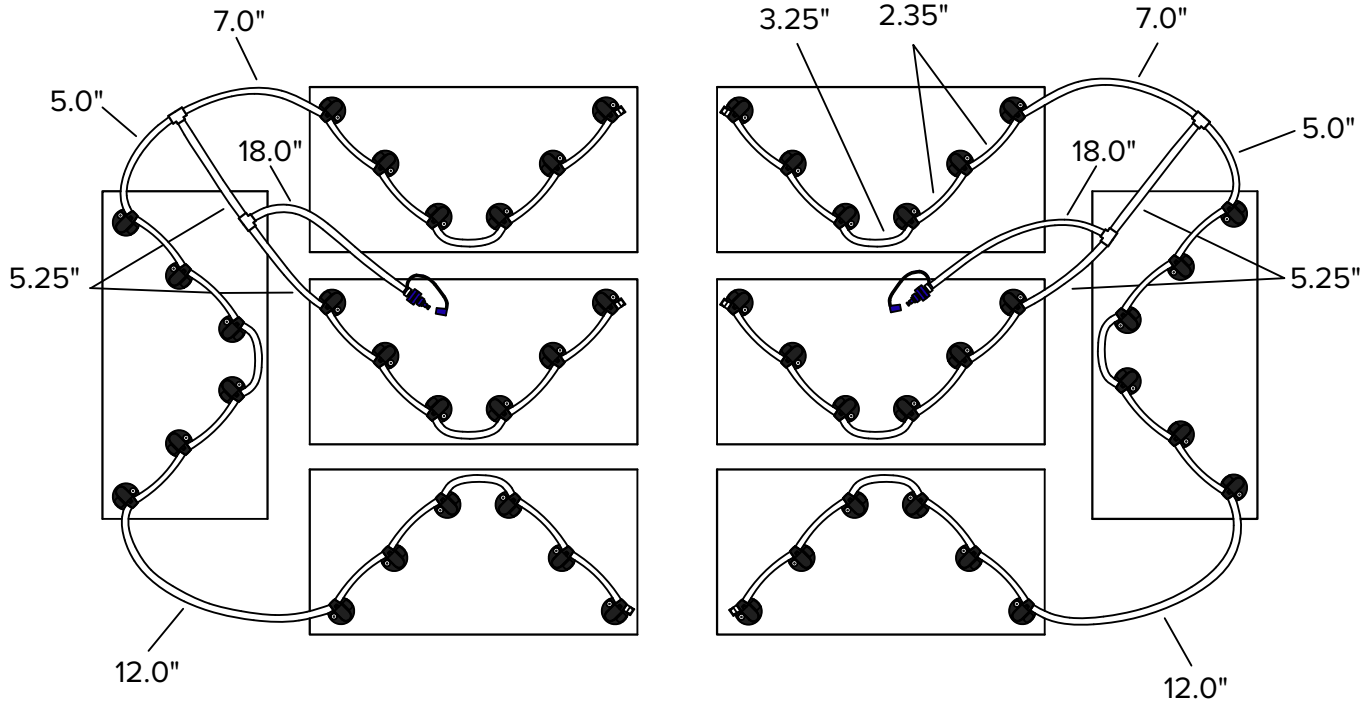

Front of the car

- 32 @ 2.35"
- 8 @ 3.25"
- 4 @ 5.25"
- 2 @ 5.0"
- 2 @ 7.0"
- 2 @ 12.0"
- 2 @ 18.0"

MAKE: Polaris	MODEL: Ranger	CELL TO CELL DIMENSION: 2.7"	VOLTAGE: 12V
<p align="center"><b>INSTALLATION INSTRUCTIONS</b></p> <p>Only water batteries after charging. Do not leave unattended.</p> <ol style="list-style-type: none"> <li>1. Remove existing battery caps.</li> <li>2. Ensure the electrolyte level is covering the plates in each cell. If not, add just enough water to cover the plates.</li> <li>3. Following the diagram above, insert the valves into the vent holes.</li> <li>4. Push straight down on each valve until it snaps into the cell.</li> <li>5. Make sure all tubing remains unobstructed.</li> </ol>		<p align="center"><b>SAFETY INFORMATION</b></p> <ul style="list-style-type: none"> <li>• Prior to servicing any vehicle, please turn the key switch to the OFF position.</li> <li>• Do not service any vehicle while the charger cable is plugged into the vehicle or while it is moving.</li> <li>• Do not use any metal tools or have anything metal on your body while working over the batteries.</li> <li>• Wear proper safety protection such as safety glasses, face shield, and rubber gloves when installing or working with batteries.</li> <li>• If acid comes into contact with your skin, or eyes, flush with water and call a physician immediately.</li> </ul>	
336-714-0448   www.batterywatering.com			