


PART NUMBER: GNV-KITBC86

VALVE: VB-TBU

REV. 1 01/13/2021

Include 3 ft of additional tubing for field connection of 2 sides. No end caps on

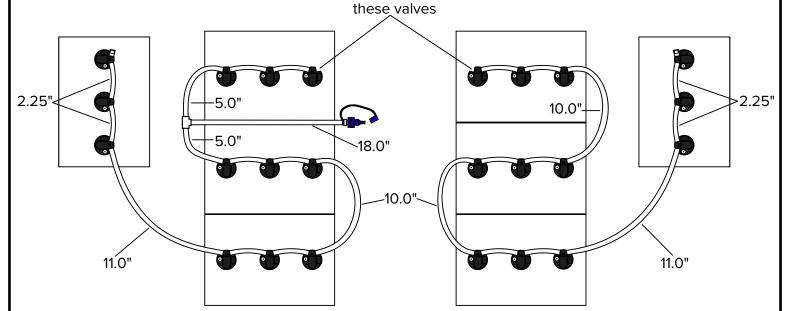

16 @ 2.25" 3 @ 10.0" 2 @ 5.0" 2 @ 11.0" 1 @ 18.0" 1 @ 3.0ft

\_\_\_\_\_I

## CELL TO CELL DIMENSION: 2.7"

**VOLTAGE: 6V** 

## INSTALLATION INSTRUCTIONS

MODEL:

Only water batteries after charging. Do not leave unattended.

1. Remove existing battery caps.

MAKE: eNVy

- 2. Ensure the electrolyte level is covering the plates in each cell. If not, add just enough water to cover the plates.
- 3. Following the diagram above, insert the valves into the vent holes.
- 4. Push straight down on each valve until it snaps into the cell.
- 5. Make sure all tubing remains unobstructed.

## SAFETY INFORMATION

- Prior to servicing any vehicle, please turn the key switch to the OFF position.
- Do not service any vehicle while the charger cable is plugged into the vehicle or while it is moving.
- Do not use any metal tools or have anything metal on your body while working over the batteries.
- Wear proper safety protection such as safety glasses, face shield, and rubber gloves when installing or working with batteries.
- If acid comes into contact with your skin, or eyes, flush with water and call a physician imediately.

336-714-0448 | www.batterywatering.com